

**It is
clear.**

ORDER NUMBER
100320

User manual

Combi drum 55
(gravity)

EN V2-2023





Introduction

Welcome to Filtreco: Filtration systems for koi ponds

Every koi lover knows the importance of good water quality. And that means having a good filtration system for your pond. To keep your water clear, the choice is clear: Choose Filtreco. We know how much you love your fish, and that is why we are the specialists that you can rely on. Your goal is to keep your water clean, clear and healthy for your fish. But for clean water, you must choose the right filtration system for your own specific situation. That's why Filtreco offers the widest selection of pond filters. All with an unparalleled level of service, the lowest risk of malfunction and easy installation. Make no mistake: when only the best quality will do, choose Filtreco. High-quality technology means quality of life for your koi.

It is clear.

Introduction

This is the user manual for the Combi drum 55 (gravity).

By purchasing this Filtreco filter, you have made an excellent choice. Please read this user manual carefully before you start using this system. This will enable you to familiarise yourself with the system first. Any work carried out on or with this system must always be performed in strict accordance with this user manual.

To ensure safe, proper use, always adhere fully with the safety guidelines. Please keep this user manual in a safe place and transfer it to the new owner in the event that the system changes ownership.

Filtreco

Nusterweg 69
NL-6136 KT Sittard
The Netherlands

IBAN: NL39RABO0136750729
BIC: RABONL2U

CoC 14052952
VAT NL 58.28.235.B01
Filtreco is a WTH B.V. brand.

+31 46 457 25 55
info@filtreco.nl
www.filtreco.nl



Contents

Introduction	03
Contents	05
1. What's included	06
2. Product description	06
3. Assembling the filter	06
4. Instructions for use	06
5. Safety instructions	07
5.1 Danger of electrical shock in contact with water	07
5.2 Pacemakers	07
5.3 Guidelines for electrical installations	07
5.4 Safe use	07
6. Placement and setup	08
6.1 Connecting the control box	08
6.2 Connecting the electrodes and water level meter	08
7. First use	09
7.1 Sequence for first use	09
7.2 Adjusting water level meter	09
7.3 Flush cycle	09
8. Control box	10
9. Control panel	10
9.1 Various functionalities	11
9.2 Error messages	12
10. Cleaning and maintenance	13
11. Troubleshooting	14
12. Winterising	14
13. Wear parts	14
14. Technical specifications	14
15. Wiring and power outages	14
16. Technical diagram	15
17. Diagram for assembly in a pond	16

1. What's included

- PP basin
- PP drum with brushes
- 70 micron stainless steel panel
- PP duct
- Water level meter with 3 pins
- Drum motor
- Submersible pump
- Spray tube with 6 sprayers (the first of which has a higher flow)
- 4x 110 mm inlets
- 4x 110 mm outlets
- 4x 110 mm drum bypasses
- 3x 1 1/2" drain with ball valve
- Control box
- Cover with safety lock
- 200 L Bio wheels
- 2x air pans

2. Product description

The basis of the drum is a tank made of high-quality polypropylene (PP). A PP drum with a coated mesh is incorporated in this tank. The combi drum filter is placed gravitationally in a drain beside the pond. The inlets are below the water surface level, and the dirty water flows gravitationally through the floor drains or skimmers into the first filtration chamber. On the outflow side, the water flows through a slotted plate into the moving bed. Because the dirty water flows through the drum, contaminants in the water cling to the interior of the drum. As a result, less water can flow through the mesh and the water level on the outside of the drum sinks. The water level meter detects this and initiates the flush cycle. This cycle consists of activating the drum motor and spray pump. This causes the drum to turn slightly more than one full rotation and the sprayers flush the mesh clean. The flush water then flows into the sewage along with the waste. The cycle repeats as often as necessary.

3. Assembling the filter

The housing of the filter consists of a PP tank with multiple partitions. The first partition is fitted with a silicone sealing strip at the flange which separates dirty water from clean. There are also 2 holes in the partition which are covered with a cap. In case of a breakdown in the drum control, the covers can be removed to enable the water to bypass the drum and flow past it without being filtered. This enables you to still use the biological filtration segment of your filtration set-up. The second partition has slotted holes that allows the water to pass into the biological filtration chambers.

The tank is fitted with a removable waste drain. This can be removed from the interior of the drum, which saves you the trouble of having to disassemble the drainage line. The inclined surface accelerates the water flow, causing the waste to be carried along with it into the drain. There are also 4 brushes installed on the inside of the drum which sweep away any algae or other coarse particles that cling to the drain. The drum filter is fitted with a removable spray tube made of PP, which is equipped with flat jet nozzles. The sprayers feature a quick-release system, making them easy to remove for cleaning. The water level meter in the basin consists of 3 electrodes, 1 flush level, 1 low-level safety and 1 common electrode. The water level for initiating the flush cycle is adjustable. Inside the basin is a high-pressure submersible pump which supplies water to the sprayers under high pressure during the flush cycle.

The drum motor is installed in a water-proof compartment inside the biological filtration section. The shaft is enclosed by a retaining ring in the installation plate. The shaft connects to the drum via a flange with a pipe. To remove the drum, you can simply detach this pipe-shaft connection, after which the drum can be taken out. You do not have to disassemble the motor to do this. The screens can be removed by detaching the tension straps and unscrewing the cover panel to remove it.

4. Instructions for use

The Filtreco combi drum filter and all parts and accessories that it comes with may only be used as follows:

- for cleaning garden ponds
- according to the user manual and technical specifications
- only with water temperatures between +4 °C and +35 °C.
- only suitable for transporting water
- not for commercial or industrial purposes
- not suitable for salt water
- never use without running water
- never use in combination with chemicals, foods or flammable/explosive liquids

5. Safety instructions

This system may cause bodily harm or damage to property if you do not use it properly and in accordance with all safety guidelines, or if you attempt to use it for any purpose other than that for which it was designed. This system must never be operated by children or anyone under the age of 16, or by anyone who has a physical, mental or sensory impairment or lack of experience and knowledge, unless they are under supervision and have been instructed on the safe usage of the system and informed of the dangers associated with it. Children must be made aware that this system is not a toy. Cleaning and maintenance must be performed by an adult user. This must never be performed by a child, even if they are under supervision.

5.1 Danger of electrical shock in contact with water

If your system has not been connected properly and in accordance with the safety guidelines, and a live electrical current comes into contact with water, this can result in electrical shock, causing serious injury and even death. Always switch off the current on any water-bearing equipment before you come into contact with the water.

5.2 Pacemakers

The cover has a magnetic switch. The magnetic field may interfere with pacemakers.

5.3 Guidelines for electrical installations

The electrical installation must be carried out in accordance with all national legislation and may only be performed by a nationally certified electrician. A person is considered an electrician if they have the appropriate training, knowledge, experience and certification, and are capable of assessing and conducting the necessary work. The job of an electrical specialist also includes recognising any possible hazards and complying with all applicable regional and national standards, regulations and provisions of law.

- For your own safety, always consult a professional electrician in case of any problems.
- This system can only be connected to a power supply that matches its electrical specifications. All specifications for this system can be found in this user manual.
- The system must be protected by a residual current device with a fixed residual current of max. 30 mA.
- Use only extension cables and power dividers that are splash-proof and whose cable diameters are the same as the ones supplied with the system.
- Do not allow the plug connections to come into contact with water or moisture.
- Connect the system only to a power outlet that has been installed according to industry standards and does not contain a dimmer.

5.4 Safe use

- Never use this system in connection with faulty electrical cables or a defective housing.
- Never pull on the cables to adjust the placement of the system. Ensure that the electrical cables are not pulled tightly.
- Lay the cables through a secure duct to avoid damage and make sure no one can trip or fall over them.
- Only open the housing of the motor or other electrical components if this is necessary as instructed by the user manual.
- Only perform maintenance and other tasks on the system as described in this user manual.
- In case of any problems that you are unable to resolve, please contact Filtreco.
- Only use original spare parts in combination with this system.
- Do not attempt to modify the technical features or specifications of this system in any way.
- The connector cables cannot be replaced. In case of a broken cable, the entire system or affected part must be replaced entirely.
- When using in the open air, a roof must be placed above the control box and a rain-proof cover must be placed above the motor.
- Over-voltage in the main power supply can cause the system to malfunction.
- Do not inhale the spray mist from the sprayer system. The spray mist may contain harmful bacteria.
- If the cover is lifted, the flush system stops working. Once the flush cycle has completed, allow some time before opening the cover.

6. Placement and setup



If you plan to install this system in a way that deviates significantly from the recommendations in this user manual, allow for a specialist to inspect the installation to ensure that all technical specifications have been met.

The combi drum filter must always be placed in a level position on a smooth, flat subfloor. This subfloor must support the entire bottom of the drum filter. It is recommended to place the system on a flat cement floor. When positioning the filter, ensure that there is adequate space on all sides so that you have room to perform maintenance. The water level at which the filter must be placed is indicated by an arrow in the first filtration chamber. To ensure that the filtration system functions properly, the water level must be kept constant and must not deviate from the required levels. Any greater deviation will result in an inaccurate measuring of the water level. If the water level rises by more than 2 cm, the water will overflow via the duct into the sewage system. To maintain a constant water level, you can install an automatic filling station with overflow function for your pond.

For optimal water flow, use all 4 inlet connections. It is recommended to use flexible rubber sleeves and joints when connecting the water lines. These can compensate for small differences in dimensions and also absorb vibration.

Install slide valves or ball valves in front of and behind the filter, so that the filter can be emptied during maintenance.

Maintain enough distance between the wall and the drain so that you can remove the drain.

The drainage duct can be connected to a sewage connection with a 110 mm diameter. Make sure that the duct is positioned at an adequate incline. It is recommended to install a pipe with a flexible rubber sleeve. These can compensate for small differences in dimensions and also absorb vibration. They can also be detached to remove the drainage duct.

Always use high-quality pipes with an adequate wall thickness.

Ideally, use 45 degree elbow connectors.

Lay the pipes at a downward angle so that they can be fully emptied during the winter to protect them against frost.

Note! Electrical shock hazard. Use of this electrical system or installation in connection with a (swimming) pond may result in severe injury or death.

Only use this system in accordance with national and regional regulations.

Always use suitable transport and lifting equipment when transporting and assembling this system.

6.1 Connecting the control box



Ensure that the control **box is not plugged in to the main power supply when you open the control box!**


Hang up the box on 4 screws aligned with the grooves on the back of the box. Space between the holes in the wall: w = 280 mm x h= 251 mm. Remember that the length of the cable for the electrical equipment is 3 metres. Be careful when opening the box and remember that the screws you must loosen to open the door should not protrude when you turn the box open. The same goes for when you close the box.

6.2 Connecting the electrodes and water level meter



Ensure that the control **box is not plugged in to the main power supply when you open the control box!**

Turn the gland caps on the underside of the box and slide them over the corresponding cable. Run the cable through the cable gland into the box, leaving adequate length. Then twist the gland caps closed again. Connect the electrodes as shown below using a suitable screwdriver. The labels on the electrodes match the codes on the connection inside the box.

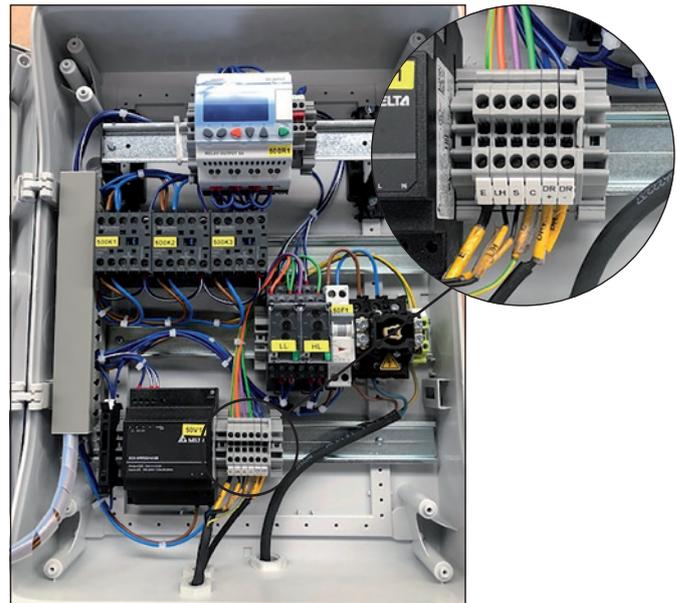

7. First use

Before using the combi drum filter for the first time, it is advisable to thoroughly clean the pond manually and flush the pipelines if possible. The reason for this is to prevent the newly started filter from immediately experiencing an interval breakdown.

Note! Electrical shock hazard.



- Always switch off the current to the system before coming into contact with the pond water.
- Secure the system to prevent it from unintentionally being switched on.
- Never connect the system to a power supply that is fitted with a dimmer.
- Do not use the system in combination with a switch that has a timer function.
- Only switch on the control box if the submersible pump is below the water level and the electrodes are below the surface.

7.1 Sequence for first use

- Remove the cover from the filter.
- Check all the water inlet and outlet connections.
- Check the line from the pump to the spray tube to ensure it is hand-tight.
- Open the valves on the outflow side.
- Open one valve in the in-flow line.
- Switch on the pump.
- Adjust the flow of the pump to point downwards in case the desired water level is not reached.
- Check all the water inlet and outlet connections again.
- Plug the connectors into the corresponding power sockets:

The plug for the spray pump goes into the power socket labelled "spray pump".

The plug for the drum motor goes into the power socket labelled "drum motor".

The plug for the water pump(s) goes into the power socket labelled "pond pump".

Any additional components connect into the power socket labelled "spare".

Please make sure that the power sockets can support a total output of 2500 W from "pond pump" and "spare" combined!

7.2 Adjusting water level meter

The water level meter consists of 3 stainless steel electrodes:

- The low-level electrode: the long coated electrode
- The flush electrode: the short coated electrode
- The common electrode: the long uncoated electrode

The flush-cycle electrode is set to the lowest level by default. This means that the flush cycle is initiated when the water level drops by approximately 90 mm before the low level is reached.

If you would like for the flush cycle to take place sooner, you can unscrew the cable gland and place the electrode higher. Afterwards, tighten the cable gland again.

Note! The other two electrodes do not have an adjusting function.

7.3 Flush cycle

If the pond's water quality is such that the time between flush cycles lasts less than 3 minutes, then the flow into the water inlet must be reduced to ensure that the cycle lasts for more than 3 minutes. After the contamination in the pond has decreased, the throttling in the inlet line can be gradually reduced as long as you allow for the flush cycle time mentioned above.



8. Control box

The control box consists of a housing with:

- 5 power sockets, namely:
 - Pond pump 1 for pond pump 1
 - Pond pump 2 for pond pump 2
 - Spare for any extra pond pump or other electrical equipment

Note! These 3 power sockets have a combined total output of 2500 Watts!

- Spraypump for the high-pressure submersible pump - max. 1000 Watts
- Drum motor for the drum motor - max. 100 Watts
- Main switch to switch the power supply to the box on and off



9. Control panel

The control panel is situated behind a locking hatch. It is easy to unlock this hatch and open it upwards. Always close the hatch carefully after every use.

You will find various buttons on the screen. Below is a brief description of the function of these different buttons.

1 Buttons A/B

Use buttons **A** and **B** to go to the previous/next software page. Below is the standard software page PAGE 00001.



(Standard page PAGE 00001)

2 ESC Button

By pressing the **ESC** button an error can be reset. If the error is reset, but it is still present, the error code will reappear on the screen. More detailed information about malfunctions can be found at (p.X).

3 Buttons -/+

With buttons **-** and **+** you can change the flush times. More detailed information about setting the flush times can be found at (p.X).

4 OK Button

With the **OK** button you can perform a manual flush cycle. Pressing this button for more than 5 seconds starts a manual flush cycle. The currently set flush time is then executed 1x after which it automatically returns to automatic mode.

9.1 Various functionalities

1 Setting the flush timer

Depending on how dirty the water is, you can choose between 5 different flush times.

The normal flush time can be used for average water contamination. If the pond is very clean and hardly contains any contaminants, such as in the winter time, you can switch to the 'Eco' or 'Smart' setting. This reduces your water consumption. If the water is heavily contaminated and you would like to flush the screen more frequently, you can choose the 'Super' or 'Turbo' setting.

The nozzle only sprays 1.5 seconds after the motor starts. This ensures that only the soiled part of the screen is sprayed. This also prevents the screen from being sprayed in a single spot while it is stationary.


The various flush times can be set on PAGE 00002. Go to PAGE 00002 by pressing the B key.

You can then use the + and - buttons to choose between the following watering times:

- In Eco mode, the screen makes a quarter revolution (spray time \pm 6 seconds)
- In Smart mode the screen makes half a revolution (spray time \pm 8 seconds)
- In Normal mode, the screen makes one full revolution (spray time \pm 11 seconds)
- In Super mode, the screen makes two full revolutions (spray time \pm 22 seconds)
- In Turbo mode, the screen makes three full revolutions (spray time \pm 33 seconds)

Ensure that in between flush cycles at least 3 minutes pass. If this time between cycles is structurally shorter, the drum will experience a 'cycle time alarm'.


The chosen flush time is always on display: Eco, Smart, Normal, Super and Turbo.

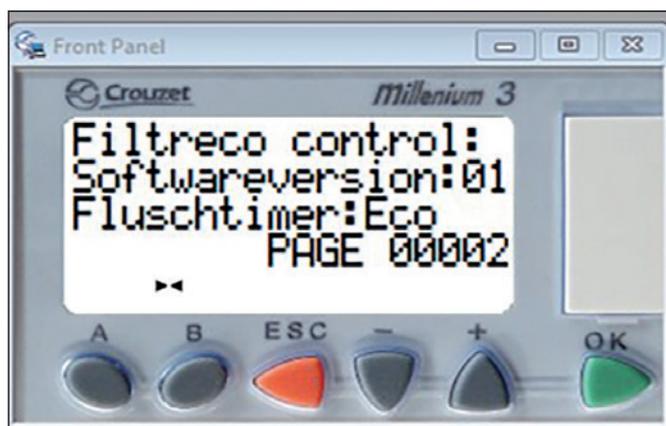

(Software version page PAGE 00002)

2 Manual control

Pressing the green button (OK) for longer than 5 seconds starts a manual rinse cycle. The currently set Flush time is then executed 1 time after which it automatically returns to the auto mode.

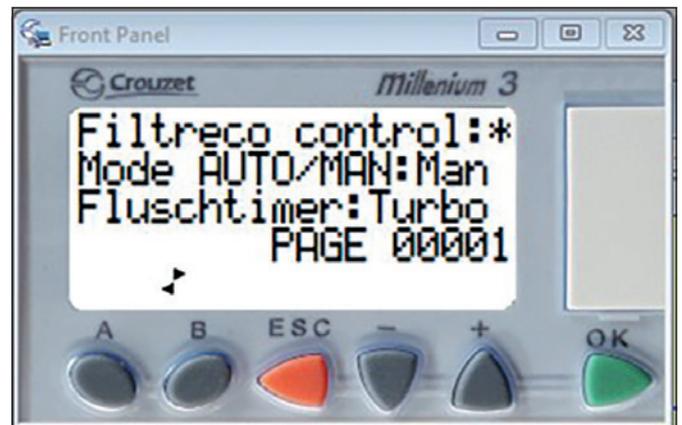

(Display during a manual rinse cycle)

3 Adjusting the control box based on the filter arrangement

The control box of the filter can be set as either gravity or pumped. The control box supplied with the filter is set in default according to the delivered filter.

However, it is possible to change the setting of the control boxes according to the selected filter arrangement. For example, the control box can be used for a gravity filter set-up as well as for a pumped filter set-up.

- Switch off the 'Main switch'.
- Unplug the system from the main power supply.
- Open the control box.
- Place the wire bridge (red) on clamps 1 and 2 in case of a gravity filter set-up. Remove the wire bridge in case of a pumped filter arrangement.



(Wire bridge for a gravity set-up)



(Display with software for a gravity set-up)

On Page 0001 you can always see which software is active for your filter. PMP refers to software for a pump-fed filter arrangement, GRV refers to software for a gravity filter arrangement.

9.2 Error messages

In case an error occurs, this will always be visible on the display. The following error can occur:

Doorswitch alarm:

The cover (contact) isn't closed. The cover is not installed or is not closed properly. The water pumps are switched off and no new flush cycles will start.

- Check whether the cover is closed properly.
- Press the ESC button to reset the door switch alarm.

In case the error continues, check whether the magnet is still in place in the holder under the cover. If so, perform the following steps:


- Switch off the 'Main switch'.
- Unplug the system from the main power supply.
- Open the control box.
- Check whether the DR+ and DR- cables are properly connected.

In case of repeated malfunction of the door security, the following can offer a temporary solution. It is important that a person is always present when the filter is in operation and the contact is bridged. Your filter will now (and temporarily) not switch off when the lid is lifted. This can lead to a dangerous situation as the drum continues to rotate and the spray pump could spray with a cover that is not in place.

- Switch off the 'Main switch'.
- Unplug the system from the main power supply.
- Open the control box.
- Place the wire bridge between DR+ and DR-.



(Display with doorswitch alarm)

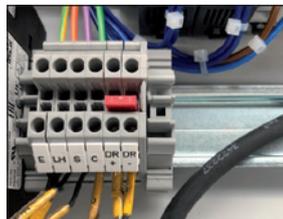

(Placed wire bridge to bypass the door security)

Level alarm:

The water level in the filter has reached a too low level. More water is being pumped out the filter than is going in. This fault is indicated with level alarm. The water pumps switch off and no rinse cycle is possible.

- Remove the cover and look for what is causing the problem.
- Check the inlets and outlets.
- In case the outer end of the flush level is under water again:
 - Place the cover on the filter.
 - Press the ESC button to reset the error.
- Press the OK button for at least 5 seconds. A manual flush cycle will now begin.
 - Check that the spray pump and motor are working.
 - If the motor does not work, check whether the plug is plugged in.
 - If the spray pump does not work, check whether the plug is plugged in.
 - After the flush cycle is finished, the filter returns to automatic mode.
 - Remove the cover and check whether the water level has returned to the required operating level.
 - Repeat the previous steps if necessary.
 - If this error message keeps recurring, increase the inflow capacity to the filter or decrease the outflow capacity.



(Display with level alarm)


Cycle time alarm:

There have been 50 consecutive flush cycles with the interval between these cycles being less than 3 minutes. This can occur if the water in the pond/filter is heavily contaminated. The water pumps are turned off.

- Set the flush electrode to the lowest level. New flush cycles will be initiated later.
- Check the inflow pipes to see whether they are clogged.
- Check the spray heads and clean these if necessary.

Set the flush timer (temporarily) 1 or 2 levels higher to reduce contamination.

If this does not help, reduce the outgoing flow until the worst contamination is removed. As soon as this error message has been resolved in the new settings, you can gradually return to the desired setting.

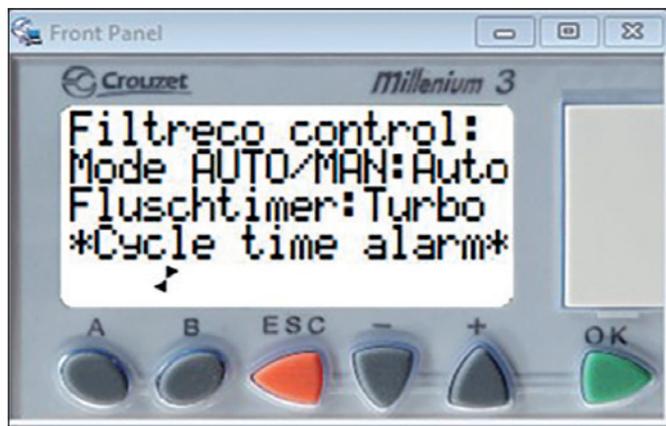

(Display with cycle time alarm)

10. Cleaning and maintenance

Note! Electrical shock hazard! This can result in severe injury or death.

When performing cleaning and maintenance, always take the following measures:

- Always switch off the power supply and secure it from being accidentally switched back on before you come into contact with the water or perform any maintenance work on the system.

• General cleaning - 1x each month:

- Switch off the "Main switch" and unplug the system from the main power supply.
- Remove any coarse waste (such as algae) on the inside of the drain.
- Clean the brushes inside the drum.
- Clean the inside of the drum.
- Clean the door security blocks.
- Clean the water level meter electrodes.

• Cleaning the sprayer heads - 2x per month:

- Remove the sprayer head by turning it to the left to unscrew it from the quick-release fastener.
- Remove the gasket from the holder.
- Remove the right-angle sprayer from the connector.
- Clean it.
- Install the gasket and sprayer back into the holder.
- Turn the holder onto the clamp bracket.



- **Complete cleaning:**
 - Switch off the "Main switch" and unplug the system from the main power supply.
 - Close the inlet and outlet spouts and drain the water through the valve until the filter is empty.
 - Remove the drain and clean it thoroughly.
 - Remove the drum and brushes and clean them under running water.
 - Remove the spray pump and clean it thoroughly.
 - Clean the entire inside of the filter.
- **Disassemble the drum as follows:**
 - Disassemble the spray tube by unscrewing the connector and removing the drain from the tube clamp.
 - Disassemble the drain by loosening the bolts. Be careful not to lose the gasket and gasket rings!
 - Turn the drum until the bolt from the shaft connection is on top. Remove this bolt.
 - Slide the drum slightly towards the partition until the tube is separated from the shaft and then carefully lift the drum at an angle upwards out of the silicone seal. Lift the drum out of the filter basin. Carefully set the drum down to prevent damage to the screen.
- **Assemble the drum as follows:**
 - Carefully lower the drum into the filter and set its flange on the shafts of the partition.
 - Press the silicone seal into the flange of the drum on all sides, using your hand.
 - Slide the drum with the flange side over the shaft.
 - Turn the drum around the shaft until the hole in the shaft is positioned underneath the hole in the tube. Reinsert the M8 x 15 bolt and screw it tightly.

11. Troubleshooting

Error codes related to the Error LED are found in chapter 9. The following issues may occur:

- No water flow:
 - Check whether the (slide) valves are open.
 - Check whether the water pumps are connected.
 - Check whether the inlet or outlet is clogged.
- Insufficient water flow:
 - Check whether the inlet or outlet is clogged.
 - There are not enough inlet connections installed.
 - The circulation pump does not have enough capacity.
 - There are dirty water particles on the outside of the drum. Check the seal between the partition and the drum.
- The high-pressure pump does not work:
 - The plug is not plugged into the right power socket (spray pump).

12. Winterising

To ensure proper functioning of the system, do not allow the water temperature to decrease below +4 degrees Celsius.

Measures that you can take:

- Place a cover or lid over the drain.
- The control and motor cannot withstand freezing temperatures. Be sure to place them in a location that is protected from rain and frost.

In case water temperatures drop below +4 degrees Celsius or there is a chance of freezing, discontinue using the system.

- Drain the system and clean it according to the instructions
- Allow the surrounding pipes to drain
- Leave the valves open
- Protect the pipes and other components from frost if necessary.

13. Wear parts

The following parts may be subject to wear:

• Silicone drum seal	Order number	100754
• Retaining ring	Order number	100757
• Brush	Order number	100759
• Drum screens	Order number	100702

14. Technical specifications

• Operating voltage:	Vac 230V
• Plug:	16 A Euro plug
• Total power output:	3680 Watts
• Cable length:	3 m
• Drum diameter:	40 cm
• Drum length:	60 cm
• Max. flow:	55m ³ /h
• Weight:	120 kg
• Height above water level:	185 mm
• Min. water level:	As stated
• Max. water level:	As stated
• Number of panels:	2
• Number of sprayers:	6


15. Wiring and power outages

If the control box is further away than the 3-metre cable length, use a CE-approved splash-resistant extension cable to reach the motor and the spray pump.


The cables for the water level meter cannot be extended using a power cable. This may cause the system to malfunction. Original Filtreco cables can be ordered separately. Any damage to the control box caused by your own wiring or third-party extension cables is not covered by warranty.

If following a power outage, the power circuit is reactivated, the control box will revert to its previous mode (the mode which was activated for longer than 10 seconds): automatic mode in automatic mode and manual mode in manual mode. The previously selected flush time will also be reactivated.

16. Technical diagram

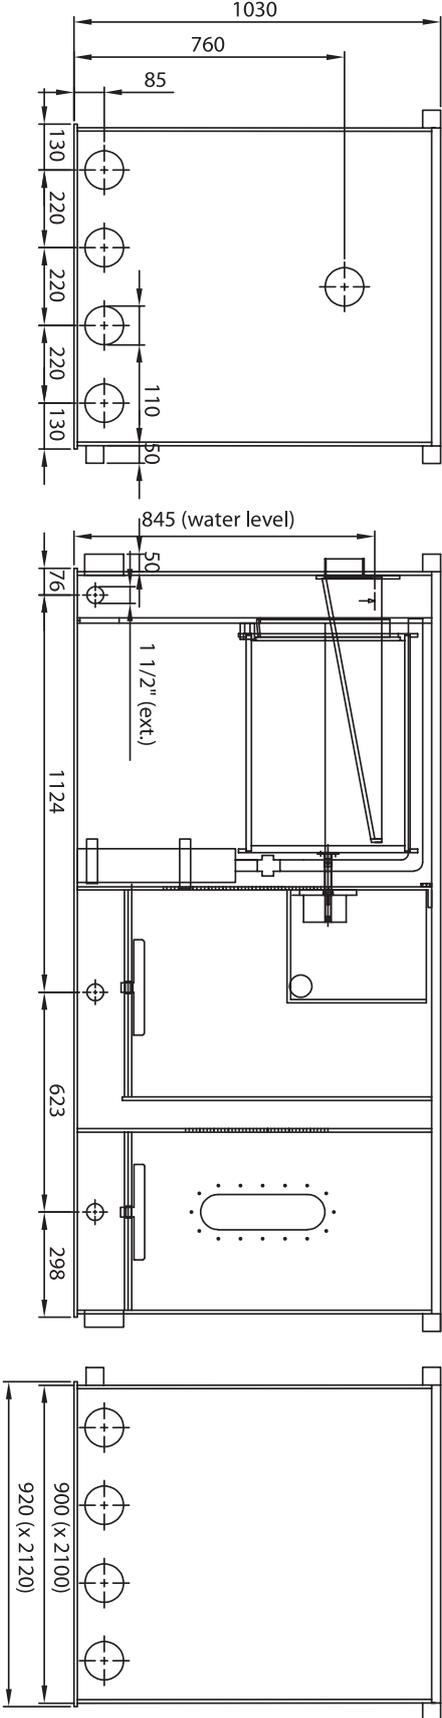

17. Diagram for assembly in a pond

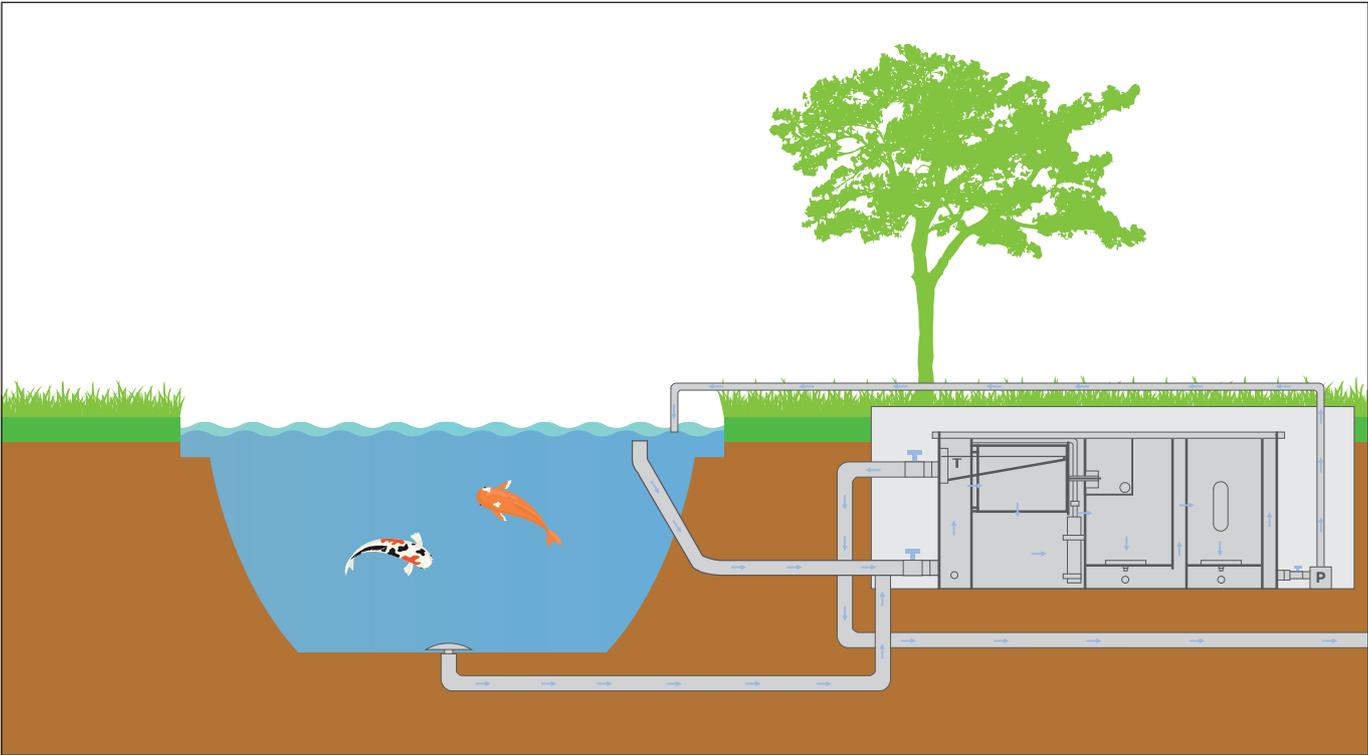

Filtreco

Filtreco

Nusterweg 69
NL-6136 KT Sittard
The Netherlands

CoC 14052952
VAT NL 58.28.235.B01

+31 46 457 25 55
info@filtreco.nl
www.filtreco.nl

Filtreco is a WTH B.V. brand.

